




1. Loosen the screws on the trim.



2. Remove the retaining clips and polystyrene.

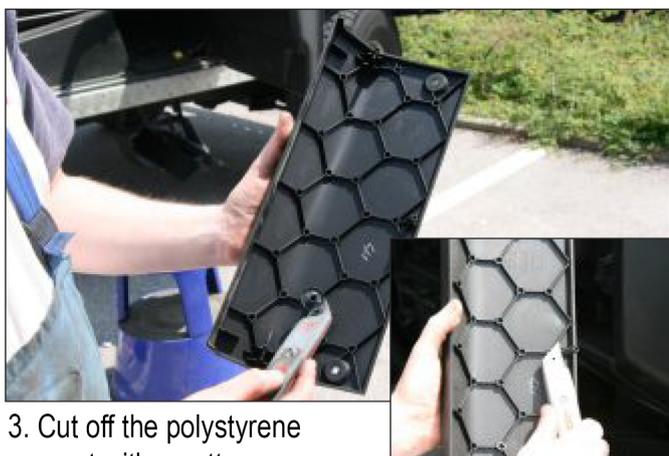

3. Cut off the polystyrene support with a cutter.



4. Unscrew the handle.



5. Position the mounting plate and screw it on.



6. Mount the front plate (5 screws!).



7. Screw the glove compartment lid to the mounting plate.

